WEARDECK™ GLAS-POWERED™ LUMBER
INSTALLATION TIPS

Directional Lines
A raised line runs end to end on one side of each board. When installing, ensure all directional lines face the same direction for a uniform deck.

Screw Lines and Markings
DO NOT USE PENCIL ON WEARDECK™. Use a blue chalk line or a blue wax-coated carpenter pencil. Red chalk is not advised and difficult to remove.

Screws
Stainless Steel Composite Deck Screws are recommended. They resist rust and use reverse threading.

Minimum Screw Lengths
2.5" screws for 5/4 x 6", 5/4 x 8"
1.5" screws for 1/2 x 6", 1/2 x 10"

Minimum Spacing
End to end: 1/16"
(3/16" recommended)
Side to side: 1/16"
(3/16" recommended)

Cutting
Chop Saw: 40T Blade
Jig Saw: 14 TPI Carbide

WEARDECK™ GLAS-POWERED™ LUMBER MAINTENANCE TIPS

Basic Maintenance
For regular cleaning, sweep or brush away dirt and debris. Use a pressure cleaner or soap, water, and a scrub brush.

Pressure Washing
Begin 18 inches away from the deck surface with a pressure washer. Move closer using best judgement after testing a small, inconspicuous area first.

Tougher Marks
Spray the affected area with a cleaning solution like Simple Green® or Soft Scrub®. Let cleaners sit for a few minutes, then scrub or pressure wash the area.

Rust
Use a liquid rust remover to remove rust marks from boards.

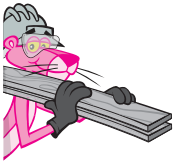

HOW WE BUILD NOW™

Owens Corning Composite Materials, LLC
One Owens Corning Parkway
Toledo, OH 43659 USA
(325) 425-8667

https://www.owenscorning.com/weardeck

Pub. No. 10025816-A. May 2024.
THE PINK PANTHER™ & © 1964–2024 Metro-Goldwyn-Mayer Studios Inc.
All Rights Reserved. © 2024 Owens Corning. All Rights Reserved.