



Century

ALUMINUM RAILINGS

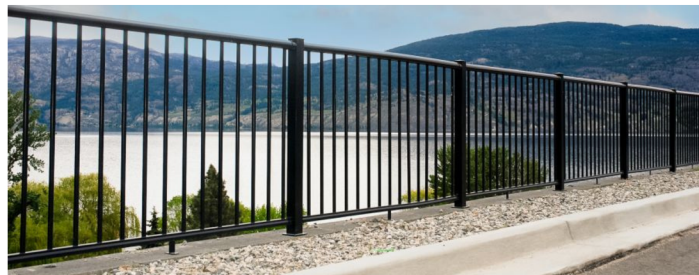

Picket Series

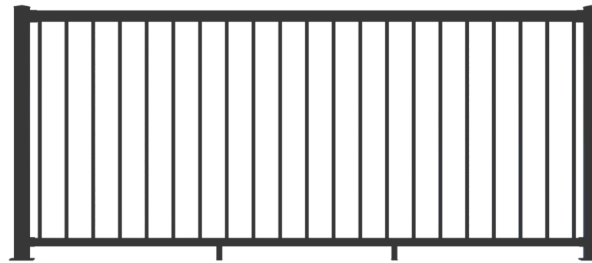

Exclusive Features

- Pre-punched bottom rail (no spacers)
- 100% compatible with all Century systems
- Contractor approved
- Premium powder coated aluminum
- Heavy duty construction
- No exposed welds or cuts
- Easy to install
- Virtually maintenance free

Product Details

- Continuous bottom rail design
- Contemporary round top design
- Radius milled pickets



Stocking Items:

Top & Bottom Rails Kits for Level Rails or Stair Rails in 6', 8', & 10'



36" or 42" Corner, Line, End and Stair Posts



Baluster Kits for 36" or 42" Railing in packs to cover 4' or 6'



Accessories and Hardware:

- Wall Brackets
- Swivel Brackets for Deck angles or Stair angles
- Stainless Steel Self-Tapping screws
- Lag Bolts for Posts
- Baseplate Covers
- Gates
- Touch-up Pens

Distributed by:



Committed

utddelivers.com

SIMPLE TO INSTALL
EASY TO ENJOY

Century

ALUMINUM RAILINGS

Picket Installation

Residential installation only. Commercial applications may differ. Always check with local building codes prior to purchasing and installing this product.

Straight

Cut and install the first spacer clip the same size as the space between the last hole in the bottom rail and the post. Start installing pickets, putting the picket into the bottom rail and plumbing it, then inserting a spacer clip into the top rail. Continue until there are 4 empty spaces. Insert those pickets as a group, then spread them out and secure with spacer clips, cutting the last clip to length.

Stair

Starting at the bottom of the stairs, install one picket so it is plumb with the bottom post. Measure the opening size for the first spacer clip, cut it and install. Continue adding a picket then a spacer clip until you've installed the last picket. Measure the last opening then measure, cut and install the last spacer clip.

